



**IMPORTANT:**

DO NOT INSERT THE USB ADAPTER UNTIL THE DRIVER HAS BEEN INSTALLED

**1 Insert the Setup CD**



**2 Find your Operating System and Install the Software**

Once the Menu appears locate the instructions on this Setup Guide for your specific operating system and install the driver for the USB adapter.



**Windows Instructions:** This Side



**Mac Instructions:** Back Side

Do not insert the USB Adapter until after the software/driver has been fully installed.

**3 Follow the Instructions for your Operating System:**


**Windows 7 and Vista**

**A. From the Menu page, select **Install Software****




If the Menu page does not appear, browse the CD drive and double-click the **Autoload.exe** file

**B. Start the Driver Installation**

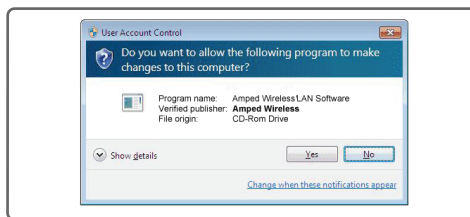


If prompted, click **Yes** to begin the installation.

**C. Continue the Driver Installation**

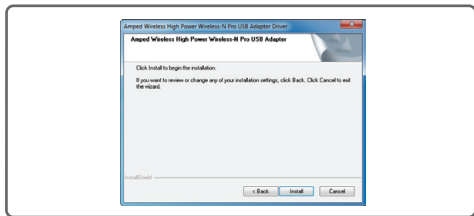

Follow the instructions that appear and click **Install** to continue the installation.

**D. Restart your Computer**

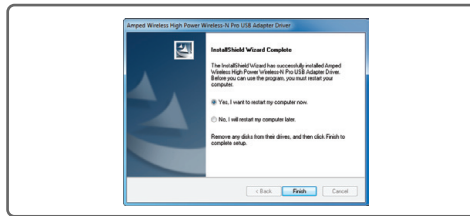


A prompt will appear asking you to restart your computer. Select **Yes** and click **Finish** to restart.

**E. Attach the USB Cable**




- a** Open the bottom cover: Lift the lock tab and slide the cover out.
- b** Insert the mini USB connector into the USB port. Secure the USB Cable by wrapping the cable around the pegs.
- c** Slide the bottom cover back on firmly so it locks. Make sure the USB cable positioned through the cable hole.

**F. Insert the High Power USB Adapter**

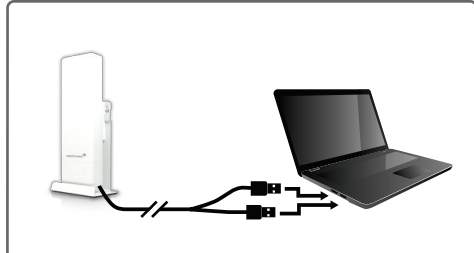

After the computer has fully rebooted, locate two available USB ports and insert the USB Adapter. Windows should automatically begin installing the driver for use with the USB Adapter. If only one USB port is available, insert the USB connector labeled **Primary**.

**G. Connect to a Wireless Network**

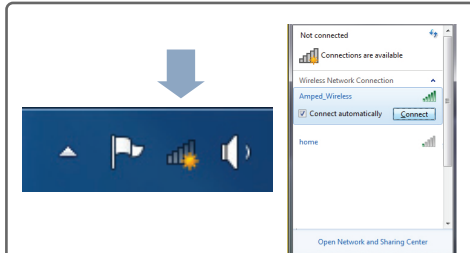

Locate the Wireless Icon in the Windows System tray (bottom right corner) and click it to view available wireless networks. Highlight your desired network and click **Connect**.


Note: If you had a wireless network adapter previously installed on your computer you may need to disable it. Otherwise it will be necessary to scroll down to locate the Amped Wireless network adapter and select a network to connect to.

**H. Connect to a Wireless Network**



If the network you are trying to connect to has security enabled you will need to enter it here.

**I. Position the Directional Antenna**

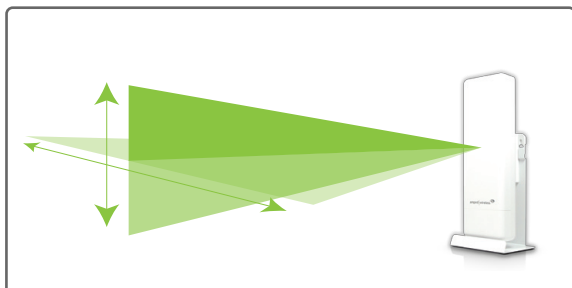

The UA600EX has a high power directional antenna. For optimal performance position the adapter towards the direction of your wireless network.

For wall and pole mounting instructions view the included Mounting Instructions on the opposite side of this Setup Guide.


**Windows XP and 2000**

**A. From the Menu page, select **Install Software****




If the Menu page does not appear, browse the CD drive and double-click the **Autoload.exe** file

**B. Start the Driver Installation**

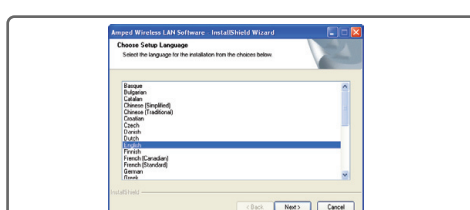


Click **Next** to begin the installation.

**C. Continue the Driver Installation**

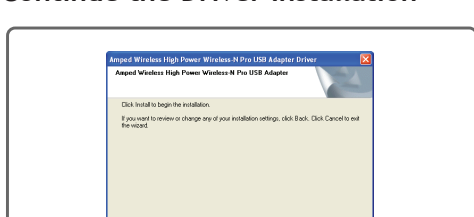

Follow the instructions that appear and click **Install** to continue.

**D. Restart your Computer**

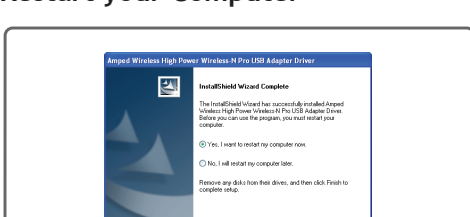

A prompt will appear asking you to restart your computer. Select **Yes** and click **Finish** to restart.

**E. Attach the USB Cable**




- a** Open the bottom cover: Lift the lock tab and slide the cover out.
- b** Insert the mini USB connector into the USB port. Secure the USB Cable by wrapping the cable around the pegs.
- c** Slide the bottom cover back on firmly so it locks. Make sure the USB cable positioned through the cable hole.

**F. Insert the High Power USB Adapter**



After the computer has fully rebooted, locate two available USB ports and insert the USB Adapter. The Found New Hardware Wizard should appear. If only one USB port is available, insert the USB connector labeled **Primary**.

**G. New Hardware Wizard**

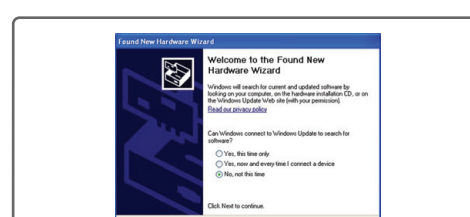


When the New Hardware Wizard appears and asks to search for software, select **No, not this time**. Click **Next** to continue.

**H. New Hardware Wizard**




When prompted by the New Hardware Wizard to install the software, select **Install the Software Automatically** (Recommended) and click **Next**.

**I. Connect to a Wireless Network**

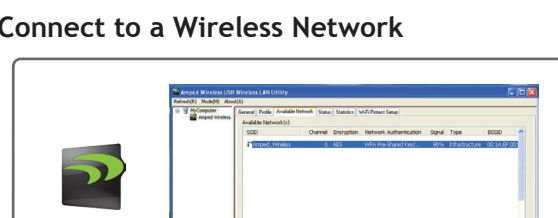


Once Windows has completed the software installation locate the **Amped Wireless Utility** icon and open the software by double-clicking the icon. Select the **Available Network** tab to view nearby networks.

**J. Connect to a Wireless Network**

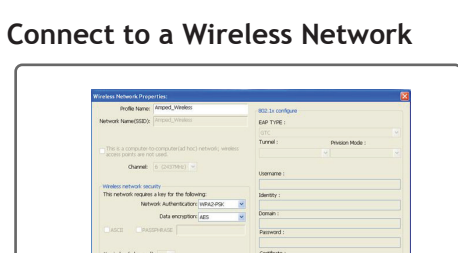

Highlight the network that you wish to connect to and double-click it to connect. If your network has security enabled, you can enter it in the **Network Key** field and click **OK**.

**K. Position the Directional Antenna**

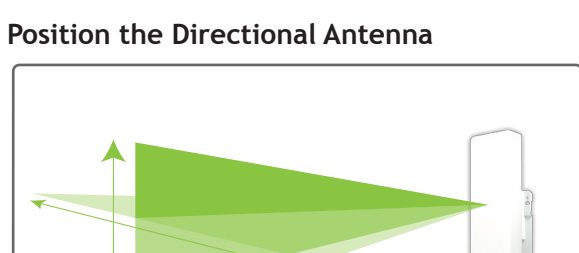


The UA600EX has a high power directional antenna. For optimal performance position the adapter towards the direction of your wireless network.

For wall and pole mounting instructions view the included Mounting Instructions on the opposite side of this Setup Guide.


## Mac OS X

### A. Access the Menu

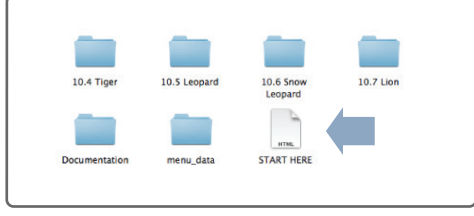


From the autoload page, click on [Start Here](#) to open the CD Menu. If the CD menu does not load browse the CD to find the Start Here file.

### C. Select your Operating System

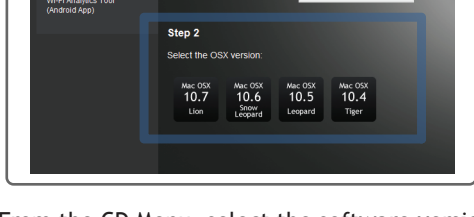


From the CD Menu, select the software version that your Mac is using to begin installing the software (i.e. 10.7, 10.6, 10.5 or 10.4).

### B. Find your Operating System Version

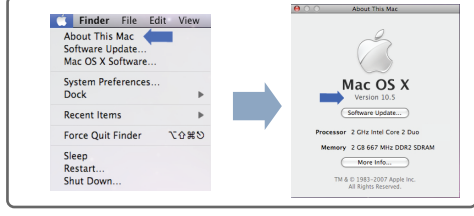

Click on the [Apple Icon](#) (upper-left corner). Select [About this Mac](#) and note the Mac OS X version.

### D. Find the Folder on the Setup CD

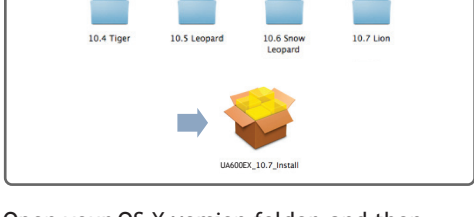

Open your OS X version folder, and then click Installation file to begin the installation.

### E. Install the Software




Follow the instructions and click [Continue](#) to install the software. If prompted, select a destination for the driver software. This is typically the Macintosh HD. Click [Continue](#).

### F. Enter your Password




If your computer has a password, please enter it when prompted and click [OK](#).

### G. Restart your Computer

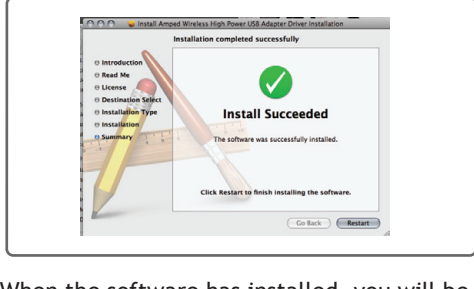

When the software has installed, you will be asked to restart your Mac. Click [Restart](#) to reboot your computer.

### H. Turn off your AirPort Card

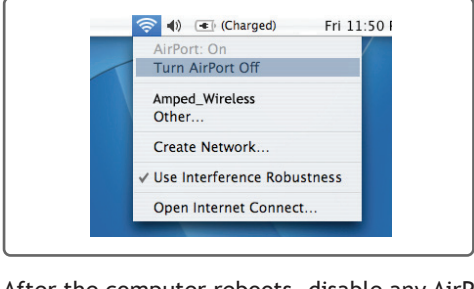


After the computer reboots, disable any AirPort cards by selecting the wireless icon (upper right-corner) and select [Turn AirPort Off](#). If you do not have an AirPort Card continue to Step H.

### I. Insert USB Cable into the unit




- Open the bottom cover: Lift the lock tab and slide the cover out.
- Insert the mini USB connector into the USB port. Secure the USB Cable by wrapping the cable around the pegs.
- Slide the bottom cover back on firmly so it locks. Make sure the USB cable positioned through the cable hole.

### J. Insert the High Power USB Adapter

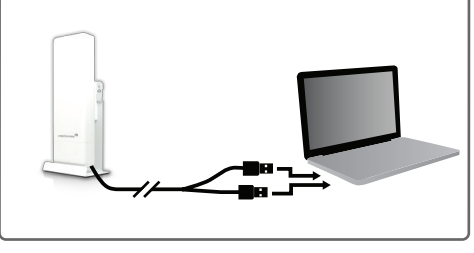

Once all AirPort cards are disabled, insert the High Power USB Adapter into your USB port. Locate two available USB ports and connect the adapter to your computer. If only one USB port is available, only insert the USB connector labeled [Primary](#).

### K. Activate the USB Adapter

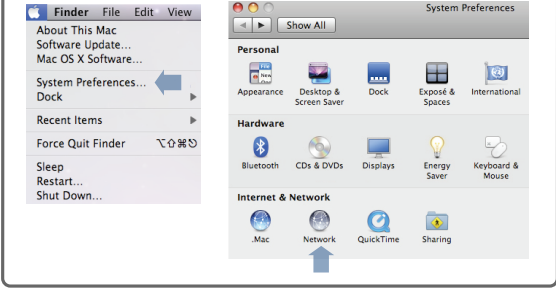

You may be prompted to activate your USB Adapter in Network Preferences. If not, select the [Apple Button](#) (upper left corner), and select [System Preferences](#) from the drop-down list. From there, select [Network](#).


### L. Activate the USB Adapter



**For OS X 10.4 Tiger and 10.5 Leopard:**  
Select [Ethernet Adapter \(en#\)](#) and click [Advanced](#).  
[Continue to Step M](#)

**For OS X 10.6 Snow Leopard and 10.7 Lion:**  
Select [Amped Wireless Adapter](#) and click [Apply](#).  
[Continue to Step O](#)

### M. Activate the Adapter (OSX 10.4/10.5 Only)

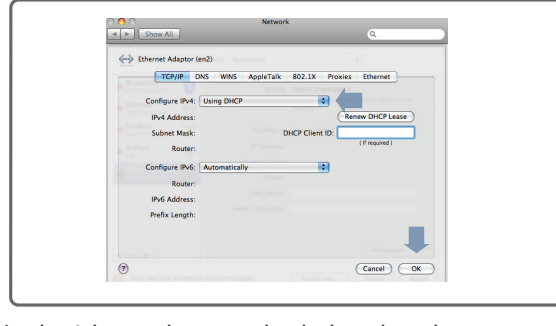


In the Advanced menu, check that the adapter is [Using DHCP](#) and then click [OK](#).

### N. Activate the Adapter (OSX 10.4/10.5 Only)



Click [Apply](#) to activate your USB Adapter.


### O. Connect to a Wireless Network

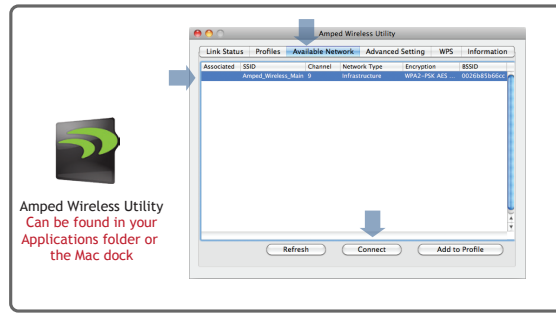

The Amped Wireless Utility should automatically load. If it does not load, click the [Amped Wireless Utility](#) icon to load the utility. Select the [Available Network](#) tab to view nearby wireless networks. Highlight your desired network and click [Connect](#).


**Note:**  
Click [Add to Profile](#) after highlighting your network to save it and have the Utility connect automatically when in range.

### P. Connect to a Wireless Network

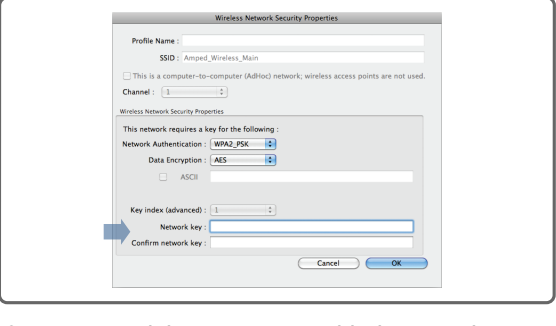

If your network has security enabled, enter the security key here. Re-enter it again to confirm. Click [OK](#) to begin using your new wireless adapter.


### Q. Position the Directional Antenna

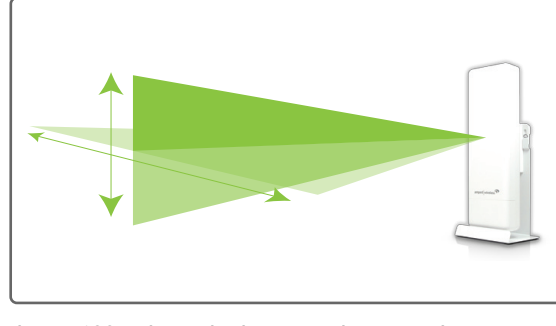

The UA600EX has a high power directional antenna. For optimal performance position the adapter towards the direction of your wireless network.


## Mounting Instructions

### Wall Mounting

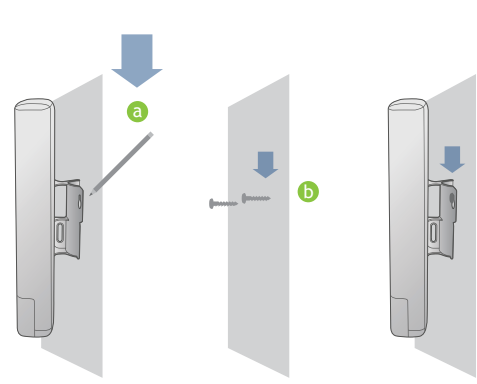


- Place the UA600EX against the wall, use a pencil and mark two pilot locations through the mounting hole on the wall.
- Remove the UA600EX and securely drill two screws where you've marked on the pilot locations wall.
- Now, mount the unit onto the secured screws.

### Pole Mounting

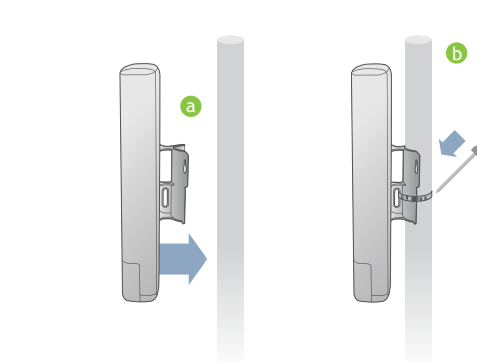

- Place the UA600EX against the pole.
- Use the included hose clamp and secure the adapter to the pole by inserting one side of the clamp through the smaller hole located on the bottom of the mounting bracket. Use a screw driver to fasten the clamp until the adapter is securely mounted.

### Desktop Mounting

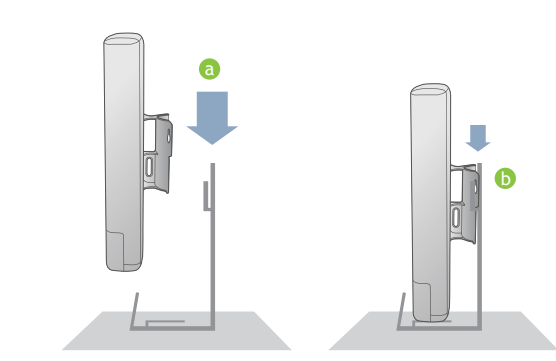

- Place the stand in an optimum location.
- Secure the UA600EX onto the desktop mount.

## Using the Adapter with only One USB Connector

The High Power 600mW USB Adapter features two USB connectors for providing the maximum performance through the power of two USB ports. However, in the case that you wish to only use one USB connection, simply insert only the USB connector labeled "PRIMARY." For full range and performance the USB connector labeled "AMPED" must also be inserted.

